
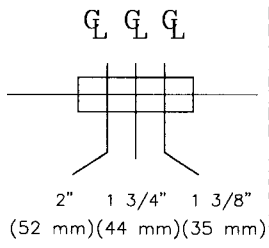


INSTALLATION TEMPLATE OF HEAVY DUTY LEVER SET

FOR WOOD OR METAL DOOR

Drill two 5/16" Dia. holes on vertical center line from both sides of door.



Drill 1" (25 mm) Dia. hole on door edge center line


FOLD AND ALIGN TEMPLATE ON EDGE OF DOOR

2 3/4" (70 mm) BACKSET

2 3/8" (60 mm) BACKSET

2 1/8" Dia. (54 mm)

PLACE TEMPLATE ON HIGH EDGE OF BEVEL



WD-OD002(056)